

# ORANGE™

AMPLIFICATION

## TERROR **STAMP**

### GUITAR AMPLIFIER PEDAL



**London | England**

DESIGNED AND ENGINEERED BY ORANGE MUSIC ELECTRONIC COMPANY LTD.  
108 RIPON WAY, BOREHAMWOOD, WD6 2JA, UK. ORANGEAMPS.COM

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarised or grounding-type plug. A polarised plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



The exclamation point within an equilateral triangle and "WARNING" are intended to alert the user to the presence of important operating or servicing instructions. Failure to heed the instructions can result in severe injury or death.

This equipment should be used under the supervision of an adult at all times.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The "Caution, hot surface" symbol indicates that the marked item may be hot.

Ensure the apparatus is installed with plenty of space around the unit (> 6"/12.5cm) as this apparatus may generate heat under normal use. This equipment is not intended to be used on soft support (like beddings, blankets etc.). This equipment should always be placed on a flat, stable surface.



To reduce the risk of fire and electric shock do not expose this apparatus to rain or moisture. Do not use in damp environments, e.g. bathrooms etc.



Do not place objects containing liquids on, or near the product.

Do not operate this apparatus or connect/disconnect a power plug whilst hands are wet.




Do not attempt to gain access to the interior of the product. No user serviceable parts inside. Refer all servicing to qualified servicing personnel.



This symbol indicates this product is classified as Waste Electrical and Electronic Equipment (WEEE) in the European Union and should not be discarded with household waste. Contact your local authority for more information and details of your nearest approved disposal facility.

## FRONT PANEL

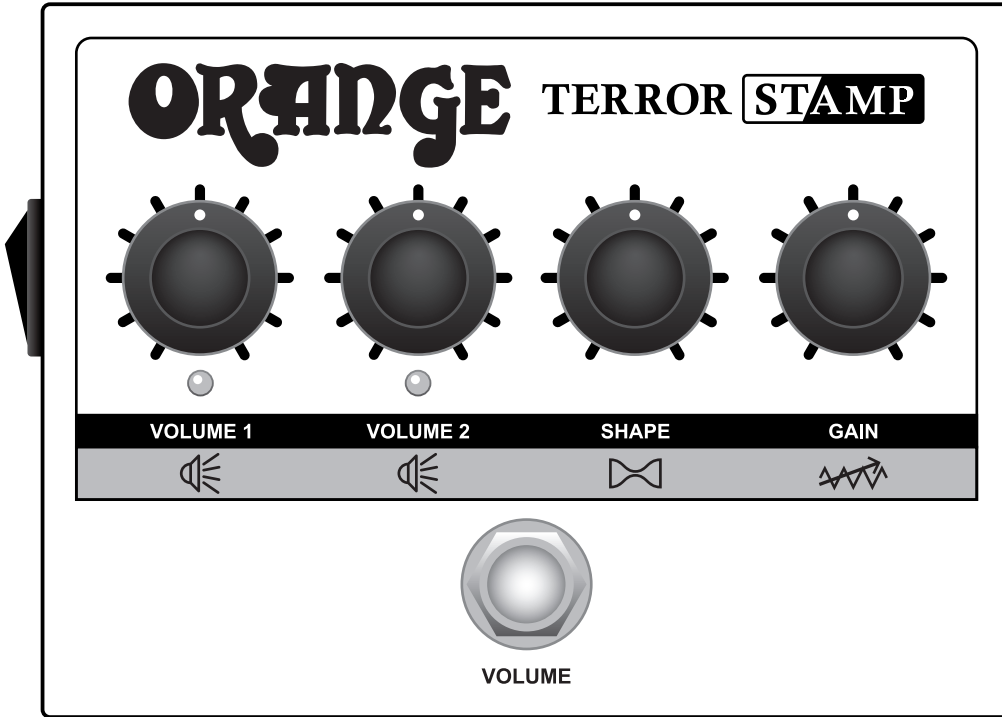

### VOLUME

Adjusts the overall output volume. Experiment with the Gain control to achieve the desired balance.

Set to the minimum position before switching the unit ON.

The footswitch switches between the two volume settings. This can be used as a boost for solos.

When using the Phones output, keep the Volume control low to avoid overloading headphones or the input of your mixer/recording console.



### SHAPE


Adjusts the tonal response. Turning clockwise reduces mids and produces brighter tones. Turning fully clockwise 'scoops' the mids entirely. Turning anticlockwise increases the mids and smooths the treble.



### GAIN

Adjusts the gain level. A variety of tones can be achieved, from clean (low setting) to heavy distortion (higher settings) and everywhere in between. With the Gain set to minimum, no sound will be heard.

## REAR PANEL

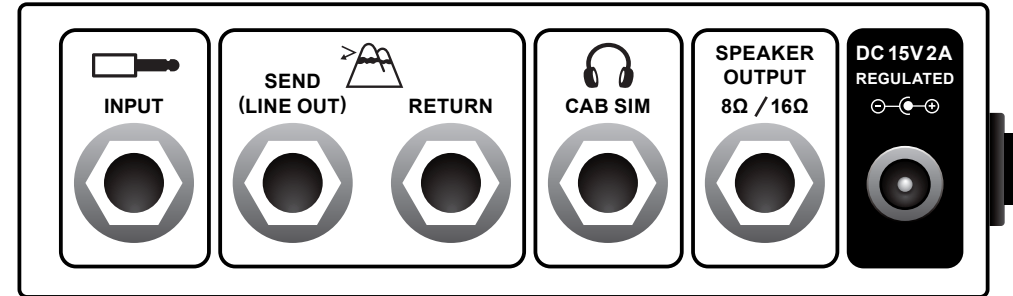

### CAB SIM

Connect headphones to this 1/4" jack for silent practice. This can also be used for connecting to a mixer/audio interface. The Phones output features Cab Sim circuitry to recreate the frequency response of a mic'd Orange 4x12 cabinet.

The Phones and Speaker Output can be used simultaneously.



### FX LOOP

**SEND:** Connect to the input of FX pedals.  
**RETURN:** Connect to the output of FX chain.

Overdrive, boost and filter effects are usually best placed between the guitar and the amp Input, rather than in the FX Loop.

The **SEND** jack output can also be used as a Line Out without Cab Sim, if the Terror Stamp is being used as a preamp on a pedalboard with no speaker connected.



### POWER SWITCH

The Power Switch is located on the left side of the **TERROR STAMP**. It switches the mains power supply to the amplifier ON/OFF.

Ensure this switch is set to OFF before connecting the included power adapter.



### INPUT

Use a quality shielded instrument cable to connect your instrument to the INPUT jack socket.

### SPEAKER OUTPUT

Connect to a speaker cabinet rated at 8 or 16 Ohms (minimum 20 Watts power handling).

Always use a dedicated speaker cable (not an instrument cable).



### 15V DC / 2A SWITCHING POWER ADAPTER

Only use the included power adapter with the **TERROR STAMP**.

Before use, ensure the supplied IEC cord plug is the correct plug fitting for your region.

Ensure the IEC cord fits tightly in the adapter before connecting the IEC cord to your AC mains supply. If the adapter or IEC cord becomes damaged, disconnect the power adapter from the mains/wall outlet and contact your Orange Dealer.

Ensure the power adaptor is connected before switching on the **TERROR STAMP**.